

INTRODUCTION

Thank you for buying our product and we hope that ALFANO will become an indispensable companion for your karting hobby.

1° TO DOWNLOAD

Click on "FILE" in the software, then on "Reading Chrono".

Click on "START SCAN" which will appear in a small window; once you click on it, it will be replaced by "STOP SCAN".

To establish the data transfer, from your ALFANO PRO, push the left button, once on "PRINT", continue by pushing the right-hand button to confirm the data transfer.

Use the tip of the infrared transfer pen on the infrared LED of your ALFANO PRO before its counter starts.

Upon following the settings of the ALFANO PRO, that is:

- "LAP TIMER" MENU or

- engine data "RECORDING" MENU (see usage instructions for the ALFANO-PRO),

corresponding diagrams will appear.

(The software will contain an example of each class of information).

2° GRAPHICS AND PICTURES IN "LAP TIMER" MENU.

All information contained in your ALFANO's memory will be expressed in pictures and graphics:

- CHRONO TABLE

- Rpm's CURVE

- ENGINE TIMES

Explore the texts in the software using your mouse.

There are several categories of information available to you in the MENU bar, like miles/hour, km/hour, Fahrenheit and Celsius temperature. The dialogue box TRACK expresses the lengths in meters, yards, feet and miles.

3° GRAPHICS IN "RECORDING" MENU

The "TAB" key permits you to move among the six diagrams.

Within the three larger diagrams, the left and right arrow keys allow you to move the cursors horizontally; the up and down arrow keys enable you to select and display on the small left-hand pictures the values of the chosen RPM. This enables you to know, for instance, the rate of your vehicle's acceleration in RPM/second.

The engine's RPM at any place of the track etc...

The three right-hand windows represent the RPM curves. Please use

the up and down arrow keys to move the cursor vertically. Press simultaneously on the "SHIFT" key to use the mouse.

4° TIPS

To compare various files, you can open the same ALFANO-VUE program several times.

In "Lap Time" Menu you can export your files (*.alf) to an excel file (*.xls).

To print diagrams, use "PRINT SCREEN" on your keyboard; Windows memorize the picture displayed on the screen. Proceed to OPEN a program (WORD, for instance) and PASTE the picture on the page.

You can record the name, the site, the total length and each section of each track and recall them later.

You can record commentaries for each "data file".

You can import a background picture of your choice *.jpg file.

5° COURSES WITH MAGNETIC STRIPS

Have a look at our Website at : www.alfano.be

6. PRODUCT ALTERATIONS

The functional descriptions in this handbook are solely for information purposes. In order to keep up with the latest technical developments the manufacturer reserves the right to undertake alterations in the functional method of the devices at any time without prior notification of the customer.

7° GUARANTEE

The product is intended for competition purposes. All electronic breakdowns, breakages in the housing, and damaged cables which are attributable to a collision or are not covered under the guarantee. Equally, the guarantee is also cancelled if the device has been opened. Only the manufacturer can decide as regards liability in the event of damages or defects of any kind. A guarantee of one year is granted for manufacturing defects (the invoice date applies).

Have a safe journey!